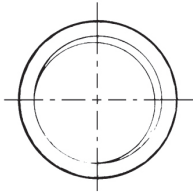
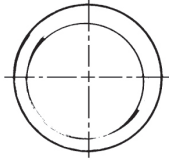
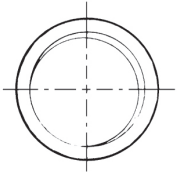
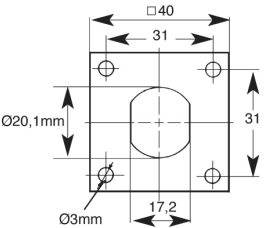
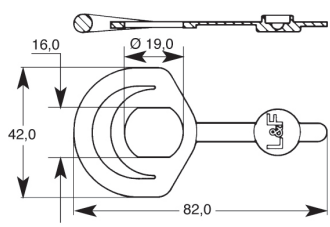
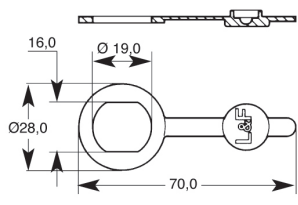
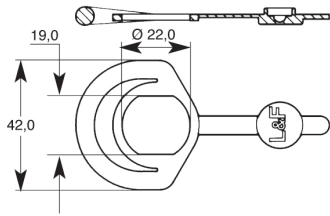
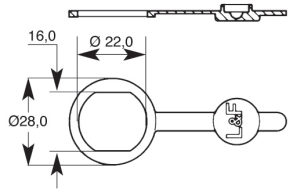


Accessories

<p>ROSETTE PRODUCT No. 70024-0100</p> <p>7002401</p>  <p>FOR USE WITH 4282, 4360, 5860 AND 5861</p>	<p>ROSETTE PRODUCT No. 70114-0100</p> <p>7011401</p>  <p>FOR USE WITH 4286, 4362 AND WOODEN OFFICE FURNITURE LOCKS WITH Ø 19.0mm NOZZLE.</p>
<p>ROSETTE PRODUCT No. 7008003</p> <p>7008003</p>  <p>FOR USE WITH WOODEN OFFICE FURNITURE LOCKS WITH Ø 16.3 - 16.5mm NOZZLE.</p>	<p>PLATE B4141</p>  <p>FOR USE WITH WOODEN OFFICE FURNITURE LOCKS WITH Ø 16.3 - 16.5mm NOZZLE.</p>
<p>WEATHER SHIELD PRODUCT No. 92113-0200</p>  <p>FINGER PULL TYPE WEATHERSHIELD</p>	<p>WEATHER SHIELD PRODUCT No. 92113-0400</p>  <p>PLAIN TYPE WEATHERSHIELD</p>
<p>WEATHER SHIELD PRODUCT No. 92113-0300</p>  <p>FINGER PULL TYPE WEATHERSHIELD</p>	<p>WEATHER SHIELD PRODUCT No. 92113-0500</p>  <p>PLAIN TYPE WEATHERSHIELD</p>